



ATLANTA

Mounting Instructions

BKI 106 e

4100-001-04/93

Department	TB
Rev. index	A
Date	18.08.06

**Electronically controlled lubricator
125 cm³ and 475 cm³ with ext. power supply**

Page	1	1
Name	Schell	24.06.05
released	TB/Lorch	24.06.05

1. Assembling tool for opening the lubricator:

Fitting aid: 65 91 031 for 125 cm³
65 91 033 for 475 cm³



Fitting wrench: 65 91 030 for 125 cm³
65 91 032 for 475 cm³



2. Opening the lubricator:

Loosen the cap nut

Remove the lid with the circuit board

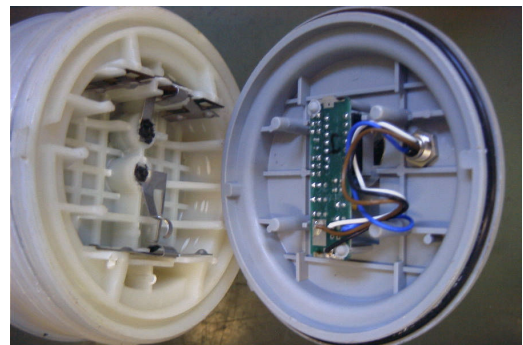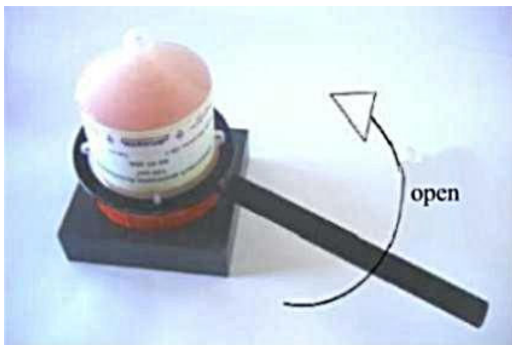

Pull out the pressure chamber from the lubricator

Using a suitable tool, push out the piston from the grease cup





ATLANTA

Mounting Instructions


BKI 106 e

4100-001-04/93

Department	TB
Rev. index	A
Date	18.08.06



**Electronically controlled lubricator
125 cm³ and 475 cm³ with ext. power supply**

Page	2	2
Name	Schell	24.06.05
released	TB/Lorch	24.06.05


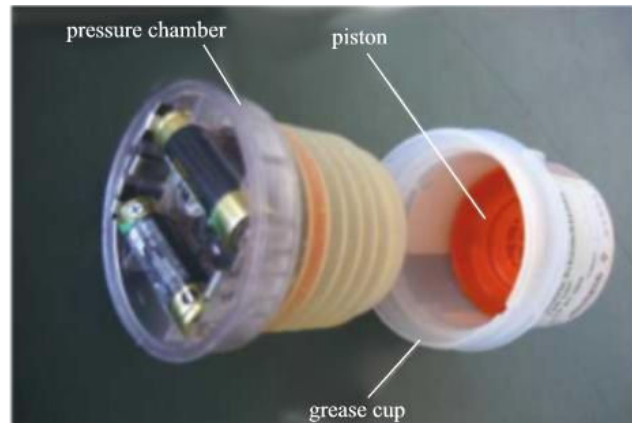


3. Filling with grease, replacement of pressure chamber, assembly of lubricator:

Fill the empty grease cup with grease, reinsert the piston and replace the old pressure chamber by a new one. Remove the batteries from the new pressure chamber.

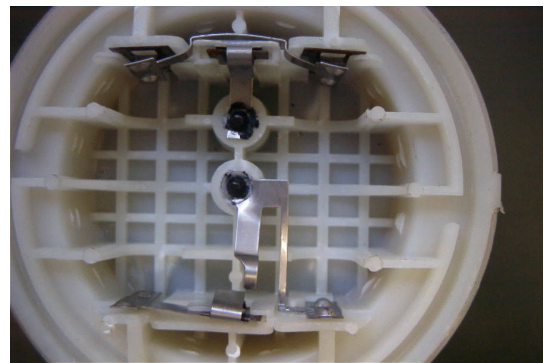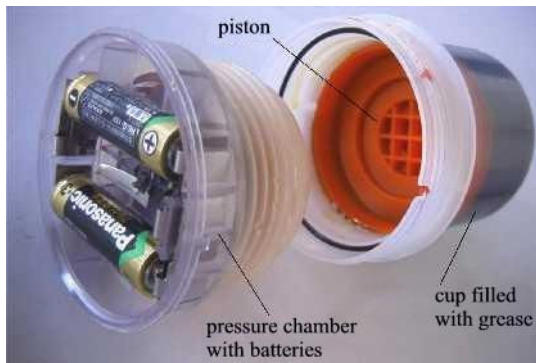

Fit the lid with the circuit board mounted onto the pressure chamber. Make sure that the contact surface on the underside of the circuit board rests on the contact spring in the pressure chamber. Slightly press the lid until the circuit board engages in the pressure chamber.

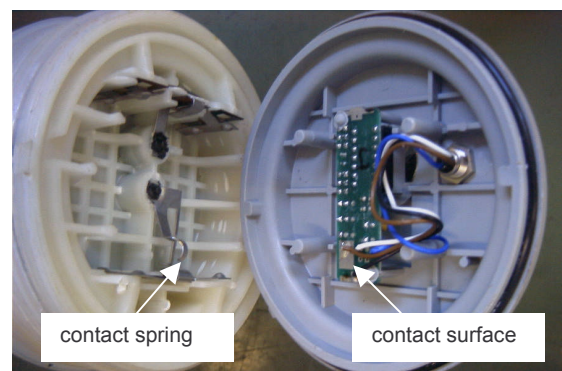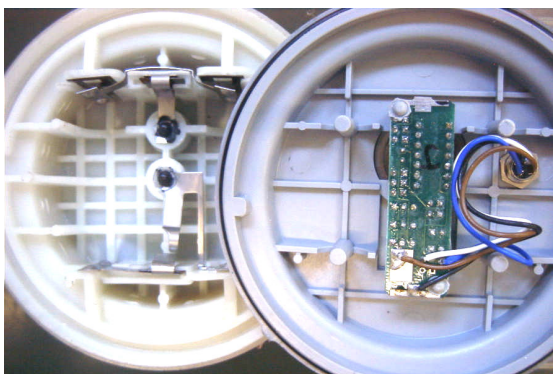



ATLANTA

Mounting Instructions

BKI 106 e



4100-001-04/93

Department	TB
Rev. index	A
Date	18.08.06


**Electronically controlled lubricator
125 cm³ and 475 cm³ with ext. power supply**

Page	3	3
Name	Schell	24.06.05
released	TB/Lorch	24.06.05

Insert the pressure chamber with already fitted lid into the grease cup and make sure it is correctly positioned. The nose at the pressure chamber must engage in the notch on the grease cup.

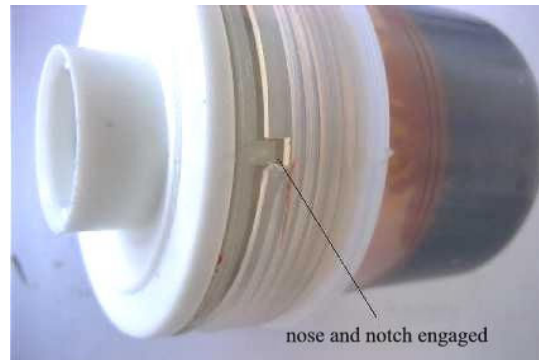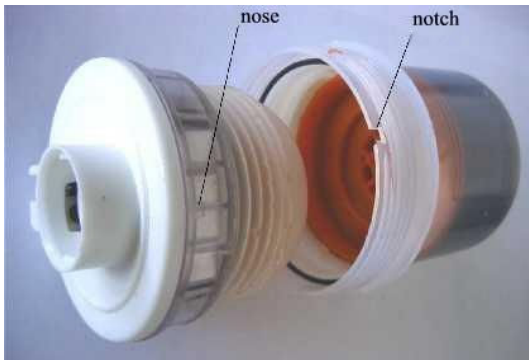

Mount the cap nut and tighten it by means of the fitting aid and the fitting wrench. Excess grease is pressed out at the lubricator opening. Now screw on the cap. Connect the control and/or power supply cable.

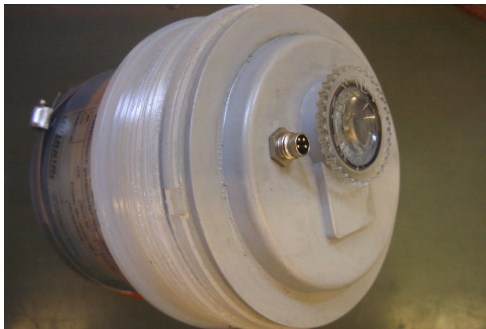

4. Switching on the lubricator

Switch on all control switches. A signal lamp flashes at intervals of 10 seconds. The pressure is built up within 6 – 8 hours. You can set the desired dosage.

Example: Switch „ON“ or 7 and switch „6M“ or 4 activated result in a dosage of :

0.7 cm³/24h for the 125 cm³ lubricator

2.5 cm³/24h for the 475 cm³ lubricator

or a lubricator emptying time of 6 months

